

ART. 3101

3000 Series full base "4+1" audiophone incorporating an AC buzzer call input, an adjustable electronic call tone input, "door open" push button and spare service button.

For use on traditional "4+1" audio systems that require an AC buzzer call or an electronic call tone including the following audio kits: traditional VR audio systems, 4K series, 8K series, VR4K series and VR120DK series kits.

Call tone adjustment: 3 level (low, medium and high) call tone switch.




3101 3000 Series Audiophone QUICK GUIDE






TECHNICAL SUPPORT Tel: 0191 224 3174 Fax: 0191 224 4938 Email: tech@videxuk.com Web: www.videxuk.com

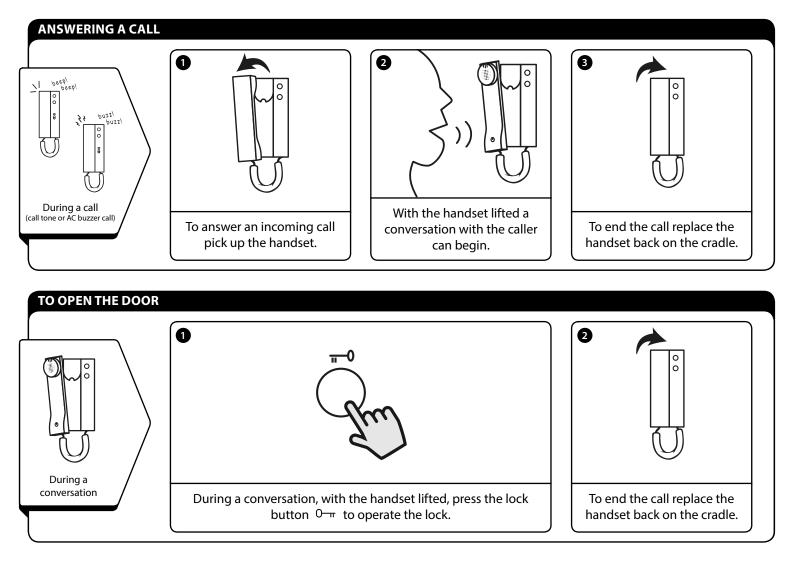

CALL TONE VOLUME ADJUSTMENT (CALL TONE ONLY) zΖ_Z ¬ ^zΖ_z Move the volume switch to In every situation the lower position to set the the middle position to set the call tone volume to low. call tone volume to medium.

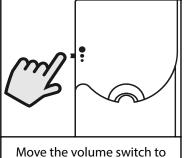

Move the volume switch to

the higher position to set the call tone volume to high.

