

## **ART. 6276**

6200 Series Videophone incorporating a 3.5" Hi-Res full colour active matrix LCD monitor specific for the "6 Wire Bus" 2200 Digital System.

It includes 4 buttons: "camera recall", "door open", "service" and "privacy".

2 LEDs indicate the privacy is activated and door open.

Programmable number of rings (3 or 6) with up to 9 melodies.

Adjustments: call tone volume switch (3 levels), picture hue, contrast and brightness.





6276
Colour Screen Videophone
QUICK GUIDE





# **SERVICE BUTTON**

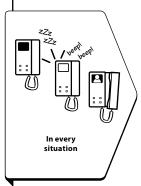

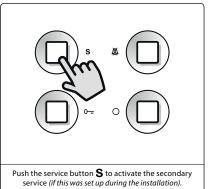




To set up the function of the service button, please contact Videx Technical.

## **PRIVACY FUNCTION**




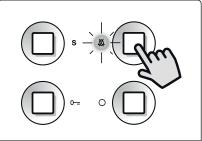

Press the privacy button 🐰 to enable the privacy function. The LED behind the privacy symbol  $\begin{tabular}{l} \begin{tabular}{l} \begi$ illuminate to indicate that the privacy is enabled.




During an incoming call, with the privacy enabled, the videophone will not ring and no picture will be displayed.

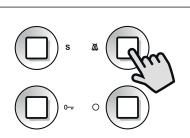

The privacy function will automatically switch  $\ensuremath{\mathsf{OFF}}$ after the programmed time expires or by pressing the privacy button  $\boxtimes$  again.

# **CAMERA RECALL**



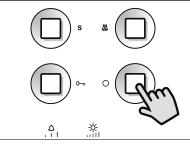

Pick up the handset and then push the camera recall button  $\bigcirc$  as many times as the ID value of the door panel (e.g. if recalling the picture from door ID 2, press this button twice, for door ID 3 press this button 3 times etc.). The videophone display will show the picture from the camera on the relevant outdoor station recalled.



During 'Camera Recall' it is possible:

To start a conversation;


To push the lock button  $0\pi$  to open the door;


To push the service button  $\, {f S} \,$  to activate the secondary service.

When the conversation time (set up during the installation) has ended, the videophone stops all communication and the system returns to the standby condition.

Hang up the handset to end the conversation.


#### CALL TONE VOLUME ADJUSTMENT

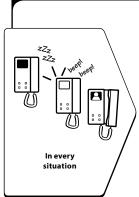

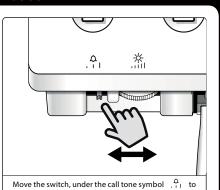


Move the switch, under the call tone symbol  $\begin{bmatrix} \Omega \\ -1 \end{bmatrix}$  to adjust the call tone volume level. Move to the left for a low call tone level, to the centre for a medium call tone level and to the right for a high call tone level.

# **BRIGHTNESS DISPLAY ADJUSTMENT**

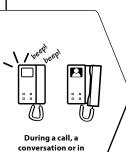

conversation or in camera recall mode

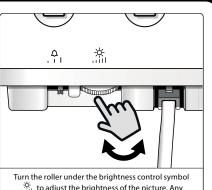

to adjust the brightness of the picture. Any adjustment to the left will reduce the brightness and any adjustment to the right will increase the brightness.