

ART. 6272

6200 Series Videophone incorporating a 3.5" Hi-Res full colour active matrix LCD monitor specific for the "6 Wire Bus" 2200 Digital System.

It includes 4 buttons: "camera recall", "door open" and 2 "service" buttons.

2 LEDs indicate the privacy is activated and door open.

Programmable number of rings (3 or 6) with up to 9 melodies.

Adjustments: call tone volume (2 levels) and privacy switch. Picture hue, contrast and brightness controls.





6272
Colour Screen Videophone
QUICK GUIDE





SERVICE BUTTONS

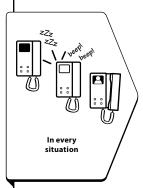

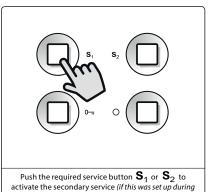


the installation).



To set up the function of the service buttons, please contact Videx Technical.

PRIVACY FUNCTION




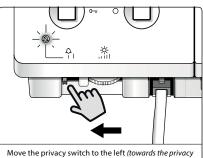

Move the privacy switch to the left (towards the privacy symbol (18)) to enable the privacy function. The LED behind the privacy symbol (18) will illuminate to indicate that the privacy function is switched ON.




During an incoming call, with the privacy switch ON, the videophone will not ring and no picture will be displayed.

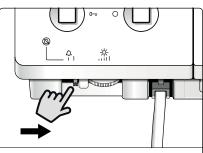

To switch OFF the privacy function and enable the call tone, move the privacy switch back to the right (towards the call tone level symbol Δ). The privacy function will be disabled and the call tone enabled.

CAMERA RECALL



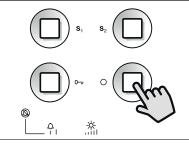

Pick up the handset and then push the camera recall button on as many times as the ID value of the door panel (e.g., if recalling the picture from door ID 2, press this button twice, for door ID 3 press this button 3 times etc.). The videophone display will show the picture from the camera on the relevant outdoor station recalled.



During 'Camera Recall' it is possible:

To start a conversation;

To push the lock button $0-\pi$ to open the door;


To push the service button \mathbf{S}_1 or \mathbf{S}_2 to activate the relevant secondary service.


Hang up the hand set to end the conversation. $\label{eq:conversation}$



When the conversation time (set up during the installation) has ended, the videophone stops all communication and the system returns to the standby condition.

CALL TONE VOLUME ADJUSTMENT

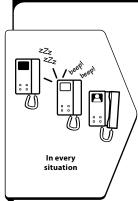

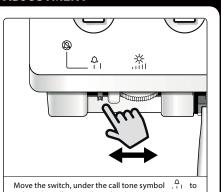

Move the switch, under the call tone symbol . it to adjust the call tone volume level. Move to the centre for a low call tone level and to the right for a high call tone level.

BRIGHTNESS DISPLAY ADJUSTMENT



Turn the roller under the brightness control symbol iii to adjust the brightness of the picture. Any adjustment to the left will reduce the brightness and any adjustment to the right will increase the brightness.